

## Roller Shutters Use and Care Instructions

- Our horizontal blinds are a superior quality, made-to-measure product, made using advanced surface treatment technologies.
- Only a qualified specialist should carry out the measuring, installation, removal and repair works.
- Incorrect installation could damage the product or the interior. It could also result in personal injury.
- The manufacturer must confirm any product design changes.
- Don't use the product if it's faulty, or needs repairs.
- The warranty doesn't apply to any mechanical damage resulting from incorrect or irresponsible use.

 


## **User Guide**

- Before raising or lowering the shutter, make sure there are no obstructions that could prevent it from moving freely.
- Shutters can be operated with a chain, wand, cord or an electric motor (i.e., with a switch mounted on the wall, or with remote control).
- Chain or cord-operated blinds are controlled by pulling the chain/ cord down.
- The chain/ cord must be pulled down only vertically not horizontally to avoid getting it entangled.
- The shutter can be lowered or raised by turning the handle accordingly.
- When lowering or raising the shutters manually, avoid using too much force. If the shutter can't move freely or seems to be stuck then stop, or you may damage the product.
- Make sure that you turn the handle slowly when attempting to fully lower or raise the blind so that the shutter profile doesn't hit the lower or upper part of the structure.
- Operating shutters with a wall switch: raise and rotate the shutter by pressing the "UP" button; lower and rotate by pressing the "DOWN" button. Pressing the "STOP" button will stop the blind in its current position.
- Same applies to electric blinds. Remote control installation is described in the installation manual.
- If mechanical damage is caused to the wall mounted switch or the remote control or if any other physical damage is caused as a result of improper maintenance or use (e.g., water, dust, mud damage), the warranty will not apply.







Lex Blinds Ltd



## **Care and Maintenance**

Cold Weather		Hot Weather	
<ul> <li>Always check that the product hasn't been covered in ice and regularly remove snow.</li> <li>If the shutter freezes and stops moving, wait until the weather warms up. The shutter will then operate smoothly again.</li> <li>The automatic operation should be switched off in extremely cold weather (when there's a risk of freezing).</li> </ul>	* * * *	When using your roller shutters to protect your home from the sun, don't close them entirely to let the air circulate between the shutter and the window.	*
Windy Weather		Use Shutters With Care	
<ul> <li>In windy weather, the shutters should either be fully raised or lowered, otherwise, they could get damaged by the wind.</li> <li>Don't leave the window open if the shutter is down. Wind-resistance is only guaranteed when the window is closed.</li> </ul>	\$	Before lowering or raising the shutter, make sure there are no obstructions that could prevent it from moving freely.	
Inappropriate Use		Inappropriate Operation	
Never place additional weight on the shutter.	*	Don't open or close the shutter by hand or with any tools. Incorrect operation can damage the shutter.	



Child Safety		Balconies and terraces		
<ul> <li>Don't let children play with the operation of the shutters.</li> <li>The shutters can only be operated by adults.</li> </ul>		If an automatically operated shutter is mounted on the only exit from the terrace or balcony, make sure you switch off its automatic operation when you intend to spend a substantial amount of time there. Malfunctioning power supply could make the shutter close.		
Repairs	Repairs		Cleaning	
<ul> <li>Regularly check all visible parts of the shutter for any damage.</li> <li>If you notice anything faulty or broken - or a foreign object stuck in the shutter - get it inspected by an expert.</li> <li>Repair work should only be carried out by a qualified professional.</li> </ul>		<ul> <li>The shutter should only be cleaned in the warm seasons. It should be cleaned carefully, using gentle movements with a damp cloth or sponge. Add a small amount of cleaning solution to the water.</li> <li>Before cleaning the shutter, lower it fully and disconnect the electric drive from the power source. The shutter can't be cleaned with high-pressure water pumps.</li> <li>Regularly remove any dirt and obstacles from the guides.</li> </ul>		